




# INTAKE THROTTLE BODY ADAPTER - GT500 INSTALLATION INSTRUCTIONS 199R12521

300-903

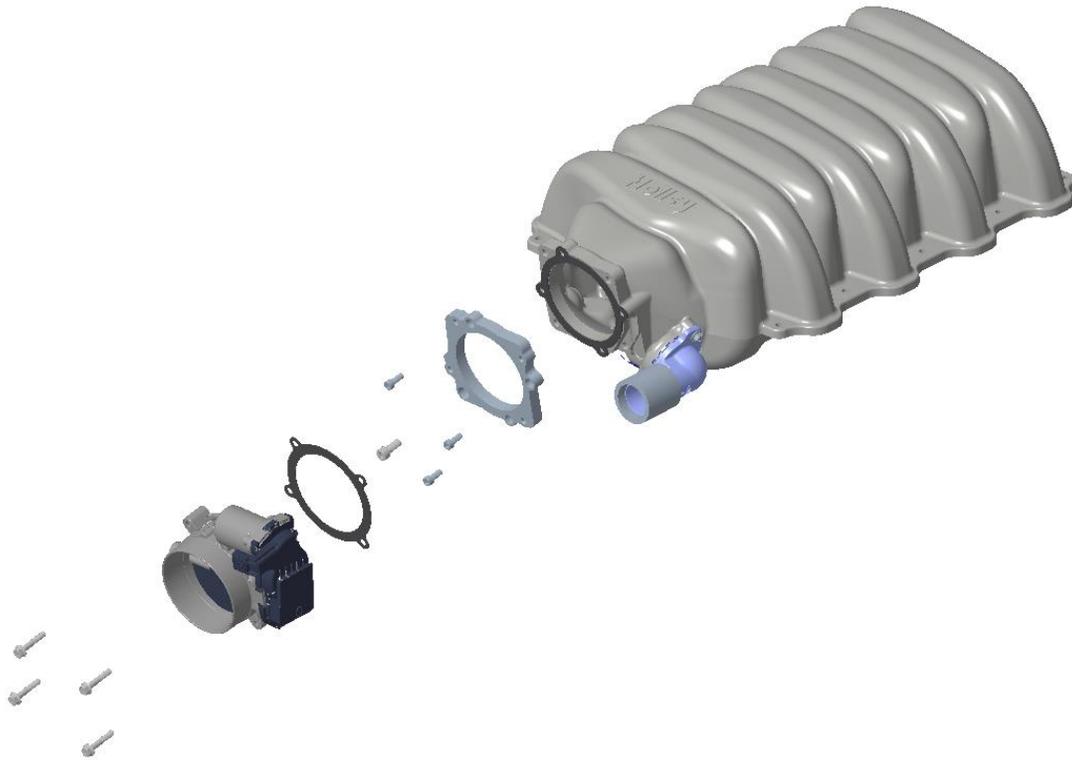

## PRODUCT DESCRIPTION:

This throttle body adapter is designed to mount 92mm GT500 throttle body to Holley 7.3L Ford intakes 300-900 and 300-900BK

## PARTS LIST:

QUANTITY	DESCRIPTION
1	Adapter plate
1	Gasket
3	M6 x 1.0 x 16 Socket head screws
1	M8 x 1.25 x 20 Socket head screw
4	M6 x 1.0 x 35 Hex head flange bolts

## APPLICATIONS:

Ford 7.3L engine with Holley intake 300-900 and 300-900BK

## INSTALLATION:

1. Assemble Throttle body gasket that came with your 300-900 or 300-900BK intake
2. Assemble adapter plate to intake using 3 M6 X 1.0 X 16 socket head screws and 1 M8 8X1.25 X 20 socket head screw. Torque 3 M6 fasteners to 85 in/lb. Torque M8 fastener to 20 ft/lb. see Figure 1.

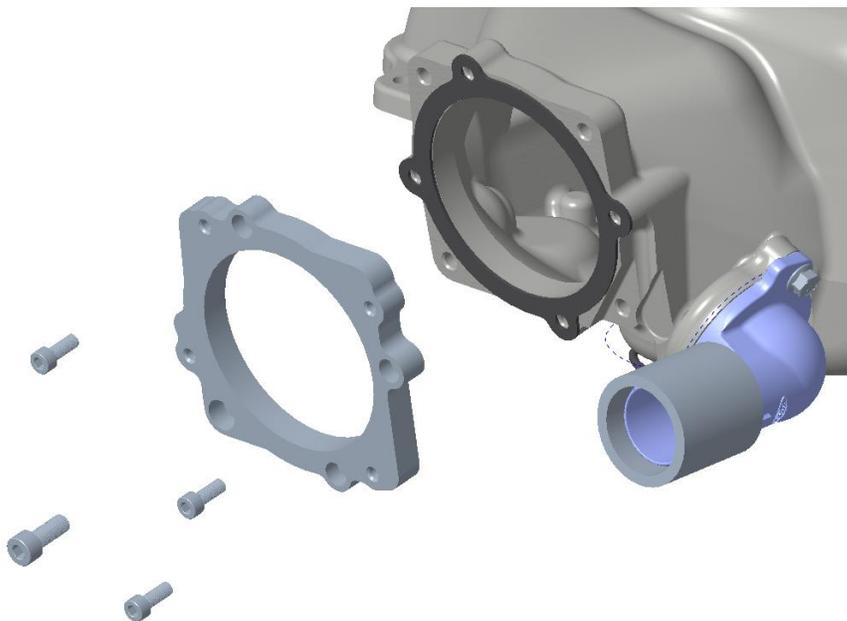


Figure 1

3. Assemble throttle body gasket that came in this kit.
4. Assemble GT500 Throttle body to adapter plate using 4 M6 x 1.0 x 35 hex head flange bolts. Torque to 85 in/lbs. see figure 2.

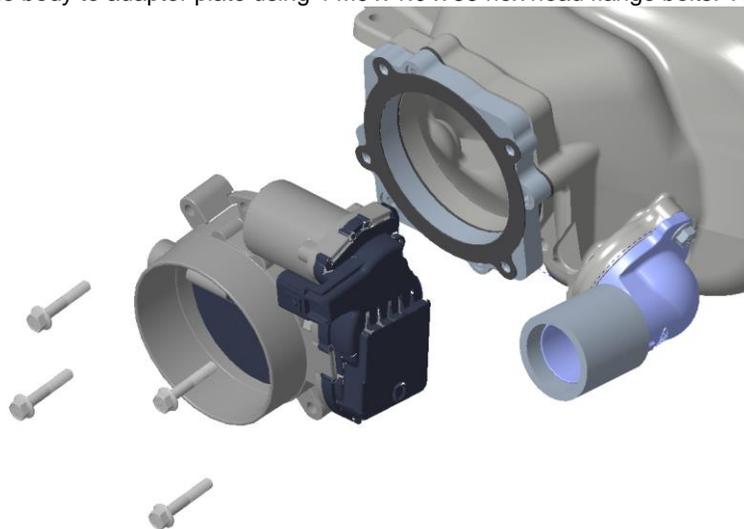


Figure 2



**Holley Technical Support  
1801 Russellville Road  
Bowling Green, KY 42101  
270-781-9741 or 1-866-464-6553 [www.holley.com](http://www.holley.com)**

**199R12521**

**Date: 9-1-2023**